



DESK 1022

THIS DESK WAS CALLED the “Schatull” desk or “writing case”. With its sleek legs and drawers just in the frame, it is reminiscent of a travel case from another era. It is made of different types of wood: Brazilian rosewood for the top, mahogany for the frame and stand and a light boxwood stripe for decoration. The desk was designed by Josef Frank in the 1940s.

DESIGN: Josef Frank / **HEIGHT:** 72 cm / **LENGTH:** 130 cm / **WIDTH:** 63 cm

DESK 1022

MATERIAL Desk top in Brazilian rosewood, frame and stand in mahogany and a light boxwood intarsia. Three lockable drawers adorned with brass handles.

CARE INSTRUCTIONS Svenskt Tenn's furniture is made from wood and then lacquered. The woodwork should be cleaned simply with a soft cloth dampened with mild dish detergent or soapy water. Make sure to dry it with a soft cloth.

Polish, oil or abrasive cleaners should never be used on the furniture. Never expose the furniture to prolonged humidity or direct heat. If an injury in the paint or wood occurs, you should immediately contact a furniture restorer. Often you can restore easier damage, but the damage is likely to worsen if not taken care of. Never move the furniture by dragging it across the floor.

The furniture lacquer can be damaged by direct heat and lengthy exposure to dampness. Keep in mind that water-filled vases can cause condensation.

Colour variations can occur if parts of the tabletop or other wood surfaces on furniture are covered early on with, for example, books or other items. It is therefore recommended that you not put vases or placemats and the like, on the tabletop for some time when the furniture is new. This will enable the wood to age evenly over a period of time. Avoid exposing your furniture to large changes in temperature and humidity, which can significantly affect natural movements of the wood.

HEIGHT	72 cm
LENGTH	130 cm
WIDTH	63 cm
ITEM NUMBER	100241